



143 Gunnedah Road
P O Box 7090 NEMSC
Tamworth, NSW 2348
Australia

Ph: (02) 6755 6000
Fax: (02) 6755 6006
[e: sales@monitor.net.au](mailto:sales@monitor.net.au)

MONITOR MACHINE INDUCTION

MODEL :

LEGUAN 80 SX

Note : Operators of boom lifts over 11 metres platform height are required to hold an EWP WorkCover licence. For all other lifts, an EWPA Yellow Card is recommended.....

Warning! This is a basic induction only, and is not designed to remove the responsibility the operator has to be fully conversant with the Operator's Manual and any site-specific requirements.....

INTRODUCTION:

- 1) Identify Safe Working Load:
 225 KG both indoor and outdoor placed anywhere on the deck.....
- 2) Weight limit feature.....
- 3) Limit switches must not be tampered with.....
- 4) Identify Wind Load Rating on Compliance Plate (outdoor rated).....
- 5) Identify crush hazards
- 6) Logbook must be filled in daily
- 7) Operators manual for technical assistance
- 8) Risk & Hazard Assessment.....
- 9) Personal protective clothing and / or equipment requirements.....

OPERATION: Perform pre-operation checks shown on back cover of Logbook

Drive

- 1) Drive Functions
- 2) Use caution on uneven ground (may use stabilizer legs for extra safety)
- 3) Drive control end (front of Leguan) is the heavier end.....

Stabilizer Legs

- 1) Stabilizer Legs: always operate 2 at a time to set machine up evenly.....
- 2) Level machine using level indicator
- 3) Use extreme caution on sloping terrain.....
- 4) Do not elevate if chassis is not level.....
- 5) Check stability of ground under stabilizers or wheels.
 Avoid soft or unstable ground. Be aware of any underground hazards.....

Scissor Operation

- 1) Buttons and their functions
- 2) Controls at ground for emergency lowering or raising
- 3) Changing from petrol engine over to 240 v operation
- 4) Hand pump operation to raise deck; (remember to close valve again after use)..
- 5) Do not use as crane or tie items to platform
- 6) Dangers of overhead power: (non-insulated)
- 7) Ensure nobody can access the area close to or under the machine

TRAILER: (If applicable)

- 1) Loading and unloading; (leave connected to tow vehicle if possible)
- 2) Correct load balance; (approx. 90 kg down load on ball)
- 3) Check the S.W.L. of towing vehicle
- 4) Brakes and adjustments
- 5) Safety chain connection
- 6) Correct tie-down method
- 7) Handbrake on in towing vehicle + remove keys and lock doors to prevent unauthorised access

SERVICE:

- 1) Any faults or requirements must be immediately discussed w/- owner before further operation
- 2) Flashing lights and movement alarms must not be disconnected. Report any malfunction immediately
- 3) Owner must service the machine every 100 hours or 3 months by regulation. Advise owner if the machine reaches either of these intervals. The machine can be serviced on site without any inconvenience to the hirer

NOTES RE HIRE:

- 1) Hirer's responsibilities (theft / damage)
- 2) Theft & Damage Waiver option to reduce liability
- 3) Hire Contract Terms & Conditions
- 4) Contact numbers for any assistance
- 5) Notes:

Date: ___ / ___ / ___

Location: _____

I acknowledge I have completed the above induction and fully understand each point covered.

Signature: _____

Name: _____

Ph: _____

Employer: _____

Ph: _____

Address: _____

Fax: _____

The above induction was given and completed by:

Print Name

Signature