



143 Gunnedah Road
P O Box 7090 NEMSC
Tamworth, NSW 2348
Australia

Ph: (02) 6755 6000
Fax: (02) 6755 6006
[e: sales@monitor.net.au](mailto:sales@monitor.net.au)

MONITOR MACHINE INDUCTION

MODEL :

AVANT ARTICULATED LOADER

Note : Skid-steer loaders and articulated loaders require WorkCover licencing (SL and LL respectively). Exemption is only available for the following reasons;

- a) The loader does not go out with any lifting devices eg: buckets or pallet forks, ie: only with a trencher or an auger drive,

OR

- b) The customer is only using the machine for private, non-profit tasks on private property. (A declaration must be signed by the customer).

Warning!

This is a basic induction only, and is not designed to remove the responsibility the operator has to be fully conversant with the Operator's Manual and any site-specific requirements.....

INTRODUCTION:

- 1) ROPS must be fitted, and FOPS for construction sites or where falling objects are a potential hazard.....
- 2) Seatbelt must be worn at all times.....
- 3) Minimum age of operators is 18 years
- 4) Check S.W.L. of machine.....
- 5) Identify Risks and Hazards of work site;
eg: Power lines
Phone lines
Service drains and / or pipes
Obstructions etc.
- 6) Ensure children have no access to work site
- 7) Operator's manual.....
- 8) Do not use in poorly ventilated or confined areas !

OPERATION:

- 1) Check fuel, engine oil, hydraulic oil, coolant & battery levels
- 2) Check for any damage, leaks or loose fittings or components
- 3) Grease all grease points (daily)
- 4) Adjust seat + fit seatbelt
- 5) Engine start + stop (Ignition key & Battery isolation key)
- 6) Drive functions
- 7) Boom and tilt functions
- 8) Teleboom function (if applicable)
- 9) Steering
- 10) 1 and 2 pump feature
- 11) Remote engagement valve
- 12) Flow divider valve operation
- 13) Handbrake operation
- 14) Use extreme caution on slopes (keep boom low)
- 15) Reverse up slopes. Do not traverse steep slopes
- 16) Do not turn on steep slopes
- 17) Use hydraulic flow lock valve for extra traction
- 18) Boom float feature
- 19) Do not carry passengers

ATTACHMENTS:

- 1) Use only approved attachments
- 2) Safe engagement of quick-hitch pins
- 3) Attaching hoses (relieving pressure in lines)
- 4) Engaging remotes (forwards and reverse)

TRAILER:

- 1) Loading + unloading
- 2) Correct load balance
- 3) S.W.L. of towing vehicle
- 4) Brakes + adjustments
- 5) Safety chain connection
- 6) Correct tie-down method
- 7) Safely securing all attachments

SERVICE:

- 1) Report any faults or service requirements to Monitor immediately before further operation
- 2) Flashing lights and reversing alarms must not be disconnected. Report any malfunctions immediately
- 3) Monitor must service the machine every 100 hrs or 3 months. Advise Monitor if the machine reaches either of these intervals. The machine can be serviced on site without any inconvenience to the hirer
- 4) If working under boom, firstly remove attachment and fit boom lock

AFTER USE:

- 1) Lower boom and attachment completely onto ground.....
- 2) Engage handbrake
- 3) Remove key and Battery isolation key
- 4) Fit articulation locking bar for transport

OTHER:

- 1) Hirer's responsibilities (theft / damage / services)
- 2) Theft & Damage Waiver: reduces liability.....
- 3) Hire Contract Terms & Conditions.....
- 4) Monitor contact numbers for any assistance
- 5) Notes:

Date: ___ / ___ / ___

Location: _____

I acknowledge I have completed the above induction and fully understand each point covered.

Signature: _____

Name: _____

Ph: _____

Employer: _____

Ph: _____

Address: _____

Fax: _____

The above induction was given and completed by:

Print Name

Signature

