



143 Gunnedah Road
P O Box 7090 NEMSC
Tamworth, NSW 2348
Australia

Ph: (02) 6755 6000
Fax: (02) 6755 6006
e: sales@monitor.net.au

MONITOR MACHINE INDUCTION

MODEL : Hoeflon Glass Lifter

Warning! This is a basic induction only, and is not designed to remove the responsibility the operator has to be fully conversant with the Operator's Manual and any site-specific requirements.....

INTRODUCTION:

- 1) Identify Safe Working Load
- 2) Height / weight limit features (if applicable)
- 3) Limit devices must not be tampered with
- 4) Identify Wind Load or sail effect if applicable
- 5) Identify swing and crush hazards
- 6) **Extreme importance** of lifting loads by the load centre of gravity
- 7) Operators manual for technical assistance
- 8) Personal protective clothing and / or equipment requirements.....
- 9) Ensure proof load test certificate is in date.....

OPERATION:

- 1) Perform pre-operation checks
- 2) Stay outside the safe exclusion zone from the machine when lifting loads
- 3) Dangers of overhead power
- 4) Care not to damage suction head & cups when in use.....

CONTROLS:

- 5) Levers, buttons and their functions.....
- 6) Vacuum gauges
- 7) 240 volt Charging of batteries.....

SERVICE:

- 1) Any faults or requirements must be immediately discussed w/- Monitor before further operation.....
- 2) Report any malfunction immediately

