



143 Gunnedah Road
P O Box 7090 NEMSC
Tamworth, NSW 2348
Australia

Ph: (02) 6755 6000
Fax: (02) 6755 6006
e: sales@monitor.net.au

MONITOR MACHINE INDUCTION

MODEL : LEGUAN 130 & 160

Note : Operators of boom lifts over 11 metres platform height are required to hold an EWP WorkCover licence. For all other lifts, an EWPA Yellow Card is recommended.....

Warning! This is a basic induction only, and is not designed to remove the responsibility the operator has to be fully conversant with the Operator’s Manual and any site-specific requirements.....

INTRODUCTION:

- 1) Safety harnesses must be worn
- 2) Identify Safe Working Load
- 3) Height / weight limit features (if applicable)
- 4) Limit switches must not be tampered with
- 5) Identify Wind Load Rating on Compliance Plate
- 6) Identify swing and crush hazards
- 7) Logbook must be filled in daily
- 8) Operators manual for technical assistance
- 9) Personal protective clothing and / or equipment requirements.....

OPERATION: (Note: Perform pre-operation checks !).....

- 1) Drive.....
- 2) Use caution on uneven ground. Use stabiliser legs as a safety precaution.....
- 3) Reverse up slopes.....
- 4) Do not leave parked on a slope (no handbrake).....
- 5) Use of 5th wheel option if fitted (level ground only)
- 6) Keep well clear of the machine when driving
- 7) Either stand in the basket, or stay at least 1 mt away from the machine (if the machine has a remote drive control).....
- 8) Never stand on the lower side of the machine on a slope.....
- 9) If the basket is removed and it is a manual drive control model, stand directly behind the machine, but do not drive it forwards up a slope from this position

- 10) Stabilizer Legs: operate two legs together smoothly & carefully
- 11) Level machine using level indicator
- 12) Use extreme caution on sloping terrain
- 13) Check the stability of the ground under stabilizers. Use stabiliser pads if required.....
- 14) Avoid soft or unstable ground. Be aware of any underground hazards
- 15) Do not operate without all 4 legs properly deployed.....

- 16) Boom operation: Levers and their functions
- 17) Duplicate controls at ground for emergency use
- 18) Emergency lowering system
- 19) Emergency slew function
- 20) Operation of "Emergency Rescue" (if fitted) for retrieval of overloaded basket.....
- 21) Dangers of overhead power: non-insulated booms
- 22) Do not use as crane or tie items to platform.....
- 23) Boom must be completely down before using other functions

- 24) Dual power: Change from Engine to 240v drive
- 25) 240 volt outlet in platform
- 26) Earth leakage relay.....

- 27) High pressure outlet: fitting at ground and platform.....

TRAILER:

- 1) Loading and unloading
- 2) Correct load balance
- 3) S.W.L. of towing vehicle
- 4) Brakes and adjustments
- 5) Safety chain connection
- 6) Correct tie-down method
- 7) Setting up on trailer not allowed
- 8) Handbrake on in towing vehicle + remove keys and lock doors to prevent unauthorised access
- 9) Turn Honda fuel tap off for transport

SERVICE:

- 1) Any faults or requirements must be immediately discussed w/- Monitor before further operation
- 2) Flashing lights and movement alarms must not be disconnected. Report any malfunction immediately
- 3) Monitor must service the machine every 100 hours or 3 months by regulation.

Advise Monitor if the machine reaches either of these intervals. The machine can be serviced on site without any inconvenience to the hirer.....

OTHER:

- 1) Hirer's responsibilities (theft / damage)
- 2) Theft & Damage Waiver: reduces liability.....
- 3) Hire Contract Terms & Conditions.....
- 4) Monitor contact numbers for any assistance
- 5) Notes:

Date: ___ / ___ / ___

Location: _____

I acknowledge I have completed the above induction and fully understand each point covered.

Signature: _____

Name: _____

Ph: _____

Employer: _____

Ph: _____

Address: _____

Fax: _____

The above induction was given and completed by:

Print Name

Signature