



143 Gunnedah Road
P O Box 7090 NEMSC
Tamworth, NSW 2348
Australia

Ph: (02) 6755 6000
Fax: (02) 6755 6006
e: sales@monitor.net.au

MONITOR MACHINE INDUCTION

MODEL :

OMME 1750 TRUCK MOUNT

Note : Operators of boom lifts over 11 metres platform height are required to hold an EWP WorkCover licence. For all other lifts, an EWPA Yellow Card is recommended.....

Warning! This is a basic induction only, and is not designed to remove the responsibility the operator has to be fully conversant with the Operator’s Manual and any site-specific requirements.....

Firstly : Read “Using Elevating Work Platforms Safely” handbook before operating any E.W.P.

INTRODUCTION:

- 1) Safety harnesses must be worn
- 2) Identify Safe Working Load (200kg / two person).....
- 3) Height / weight limit features (if applicable)
- 4) Limit switches must not be tampered with
- 5) Identify Wind Load Rating on Compliance Plate
- 6) Identify swing and crush hazards
- 7) Logbook must be filled in daily
- 8) Operators manual for technical assistance
- 9) Personal protective clothing and / or equipment requirements.....

OPERATION: (Note: Perform pre-operation checks !).....

- 1) Initial set-up: Select neutral gear.
Securely engage handbrake and wheel chocks if necessary.
Depress clutch, switch on PTO, pause, and gently release clutch.....
- 2) Stabilizer Legs: Ensure legs are deployed on firm ground
- 3) Level machine using level indicator
- 4) Use extreme caution on sloping terrain
- 5) Always use wheel chocks on uneven ground.....
- 6) Narrow and wide leg set-up options
- 7) Pull out rear step
- 8) Use ground controls to raise and rotate then lower boom.....

- 9) Boom operation: Levers and their functions
- 10) Boom speed control..
- 11) Duplicate controls at ground for emergency use
- 12) Emergency lowering system (boom must be fully retracted before lowering).....
- 13) Dangers of overhead power: non-insulated booms
- 14) Do not use as crane or tie items to platform
- 15) Boom must be completely down before raising stabilizers
- 16) 240 volt outlet, inlet and earth leakage

SERVICE:

- 1) Any faults or requirements must be immediately discussed w/- Monitor before further operation
- 2) All E.W.P.'s must be serviced every 100 hours or 3 months by regulation. Advise workshop if the machine reaches either of these intervals

